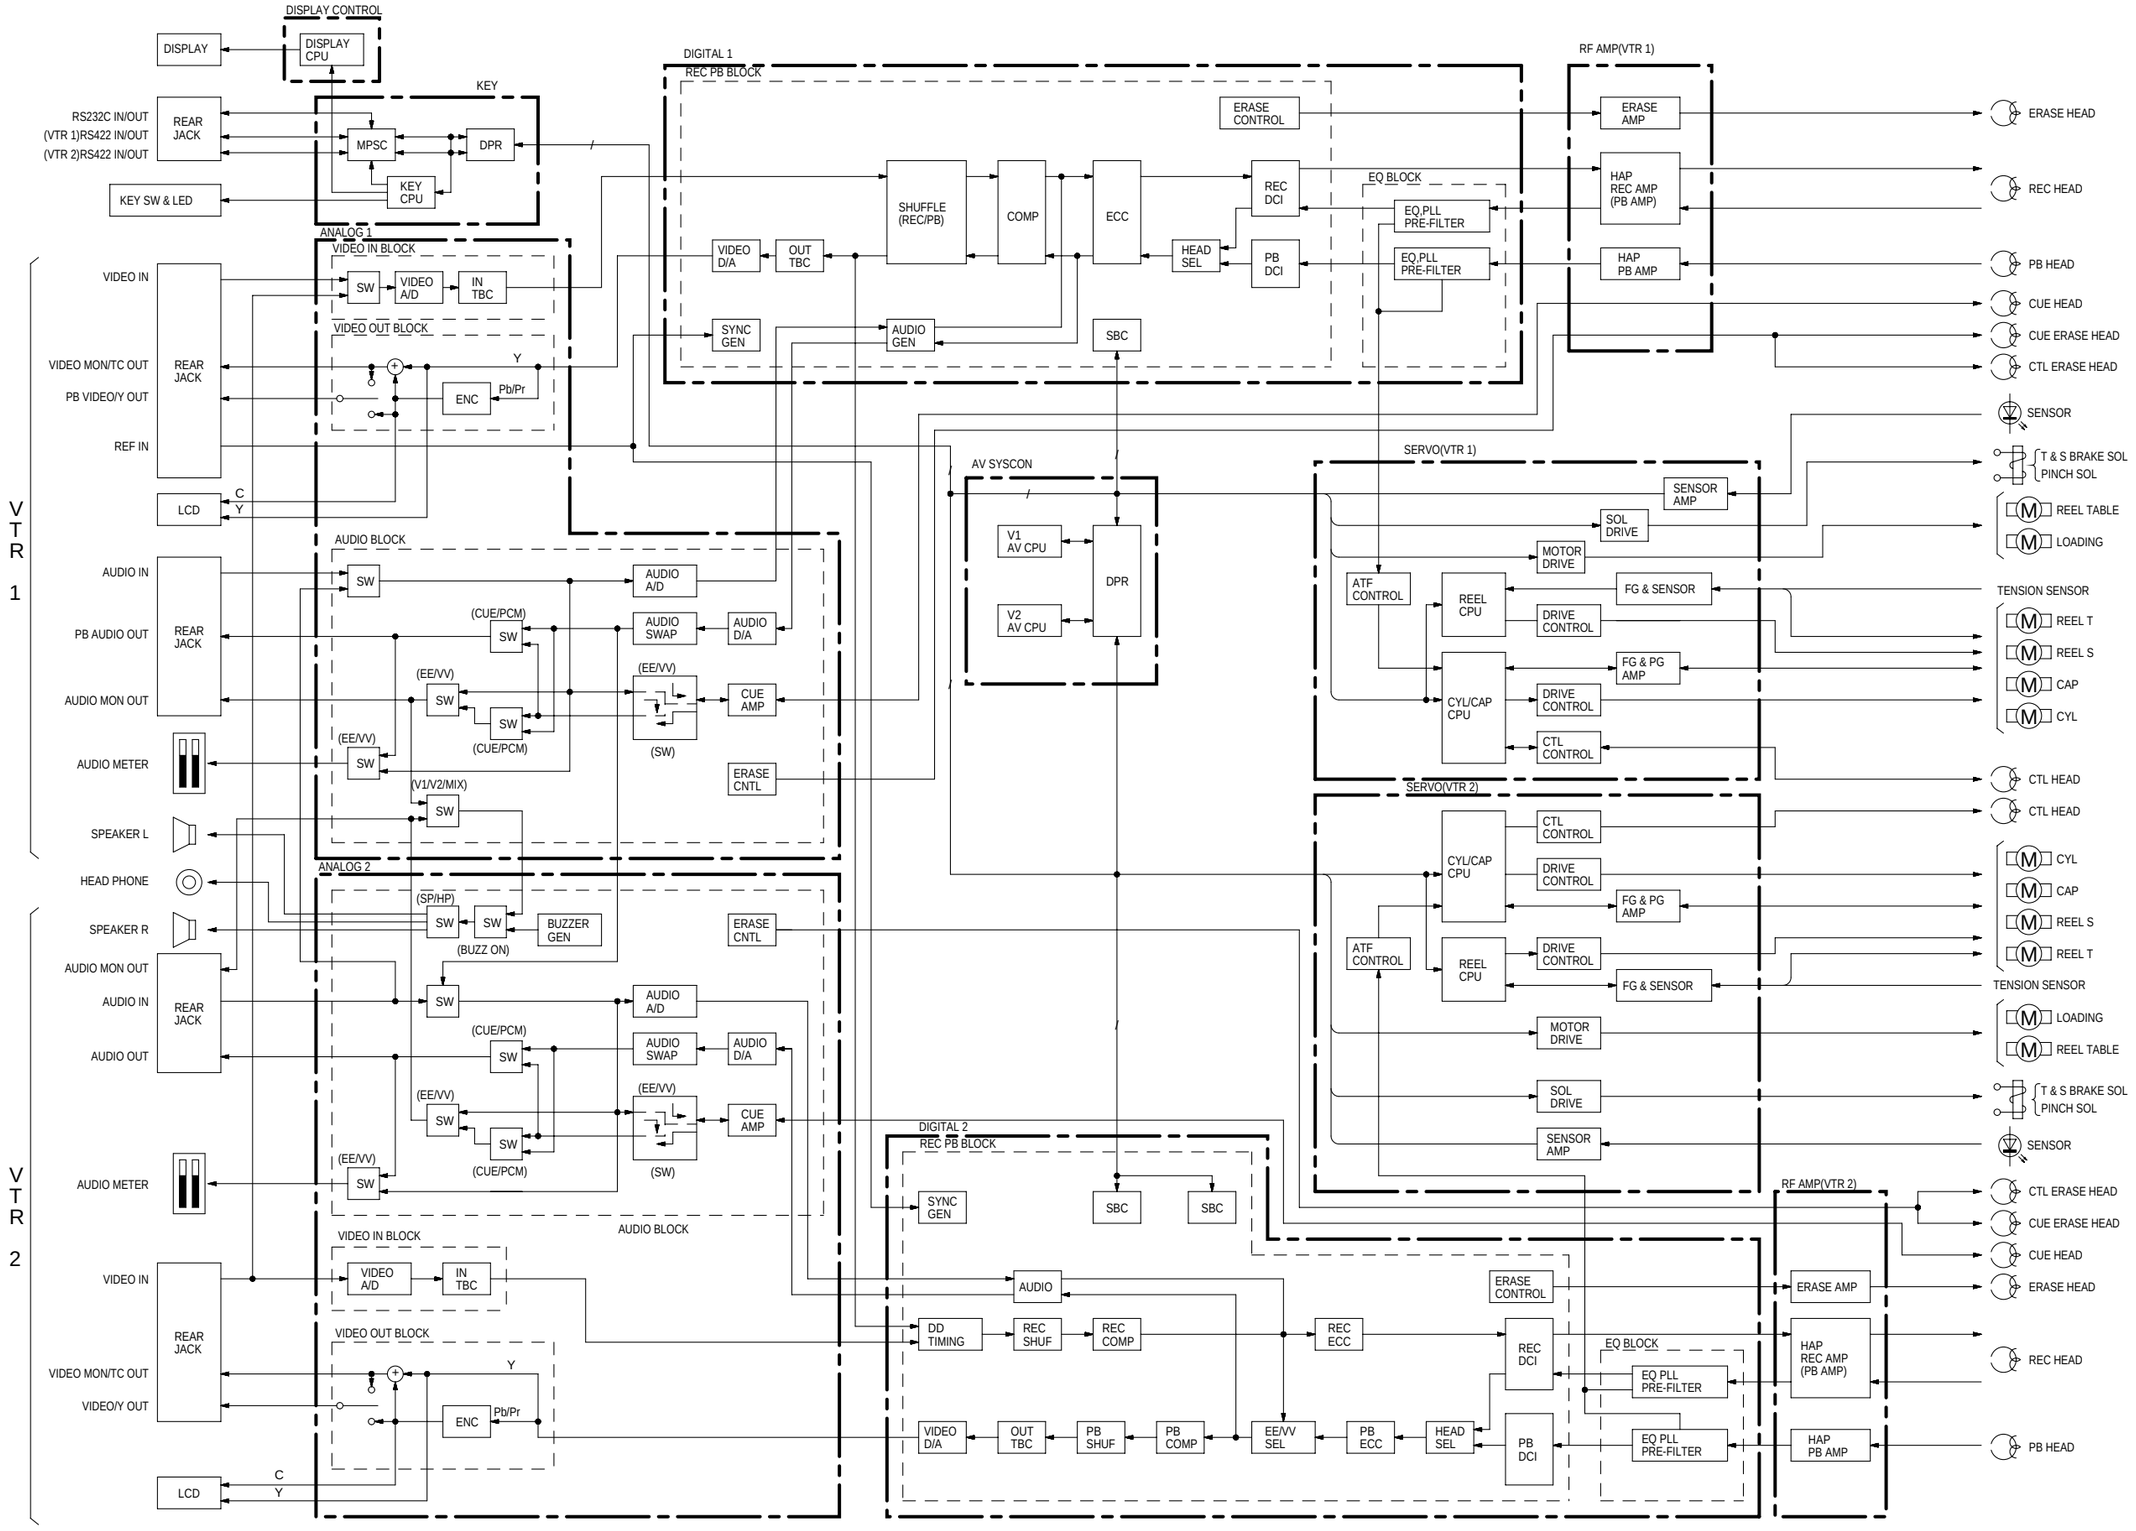
VTR 1
VTR 2
DISPLAY CONTROL
DISPLAY
DISPLAY CPU
KEY
RS232C IN/OUT
(VTR 1)RS422 IN/OUT
(VTR 2)RS422 IN/OUT
REAR JACK
MPSC
DPR
KEY CPU
KEY SW & LED
ANALOG 1
VIDEO IN BLOCK
VIDEO IN
SW
VIDEO A/D
IN TBC
VIDEO OUT BLOCK
VIDEO MON/TC OUT
PB VIDEO/Y OUT
REF IN
ENC
Pb/Pr
Y
LCD
C
Y
AUDIO BLOCK
AUDIO IN
PB AUDIO OUT
AUDIO MON OUT
AUDIO METER
AUDIO A/D
AUDIO SWAP
AUDIO D/A
(CUE/PCM)
(EE/VV)
CUE AMP
(SW)
ERASE CNTL
(V1/V2/MIX)
SPEAKER L
HEAD PHONE
SPEAKER R
ANALOG 2
(SP/HP)
BUZZER GEN
(BUZZ ON)
AUDIO MON OUT
AUDIO IN
AUDIO OUT
AUDIO METER
VIDEO IN BLOCK
VIDEO IN
VIDEO A/D
IN TBC
VIDEO OUT BLOCK
VIDEO MON/TC OUT
VIDEO/Y OUT
ENC
Pb/Pr
LCD
C
Y
DIGITAL 1
REC PB BLOCK
VIDEO D/A
OUT TBC
SHUFFLE (REC/PB)
COMP
ECC
HEAD SEL
REC DCI
PB DCI
ERASE CONTROL
EQ BLOCK
EQ,PLL PRE-FILTER
SYNC GEN
AUDIO GEN
SBC
AV SYSCON
V1 AV CPU
V2 AV CPU
DPR
DIGITAL 2
REC PB BLOCK
SYNC GEN
SBC
SBC
AUDIO
DD TIMING
REC SHUF
REC COMP
REC ECC
ERASE CONTROL
REC DCI
EQ BLOCK
EQ PLL PRE-FILTER
VIDEO D/A
OUT TBC
PB SHUF
PB COMP
EE/VV SEL
PB ECC
HEAD SEL
PB DCI
EQ PLL PRE-FILTER
RF AMP(VTR 1)
ERASE AMP
HAP REC AMP (PB AMP)
HAP PB AMP
ERASE HEAD
REC HEAD
PB HEAD
CUE HEAD
CUE ERASE HEAD
CTL ERASE HEAD
SERVO(VTR 1)
SENSOR AMP
SOL DRIVE
MOTOR DRIVE
ATF CONTROL
REEL CPU
FG & SENSOR
DRIVE CONTROL
CYL/CAP CPU
FG & PG AMP
CTL CONTROL
SENSOR
T & S BRAKE SOL
PINCH SOL
REEL TABLE
LOADING
TENSION SENSOR
REEL T
REEL S
CAP
CYL
CTL HEAD
CTL HEAD
SERVO(VTR 2)
CYL/CAP CPU
CTL CONTROL
DRIVE CONTROL
FG & PG AMP
ATF CONTROL
REEL CPU
DRIVE CONTROL
FG & SENSOR
MOTOR DRIVE
SOL DRIVE
SENSOR AMP
CYL
CAP
REEL S
REEL T
TENSION SENSOR
LOADING
REEL TABLE
T & S BRAKE SOL
PINCH SOL
SENSOR
RF AMP(VTR 2)
CTL ERASE HEAD
CUE ERASE HEAD
CUE HEAD
ERASE HEAD
ERASE AMP
HAP REC AMP (PB AMP)
HAP PB AMP
REC HEAD
PB HEAD